



Low Pressure Regulator

Release tension from the regulator by unscrewing the adjusting screw. Remove the four “Phillips Head” screws from Bonnet. Using an “Allen Head” wrench, remove the four bolts holding the dripwell housing to the body.

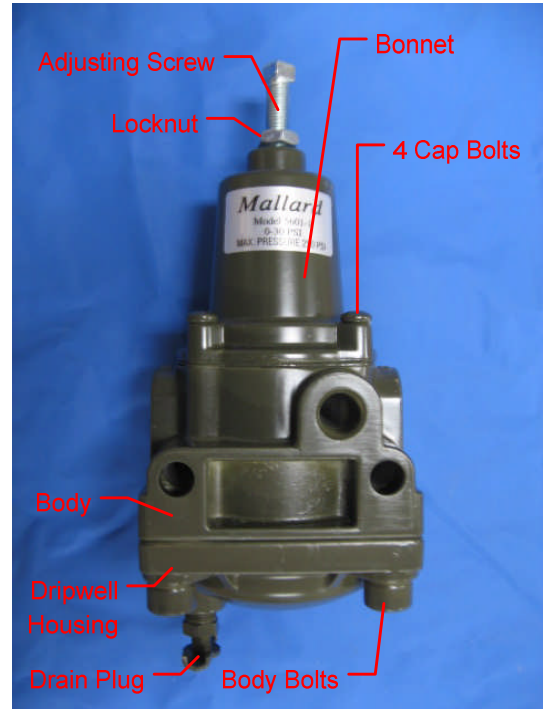

Inspect diaphragm for any nicks or tears. Replace as necessary with an available repair kit.

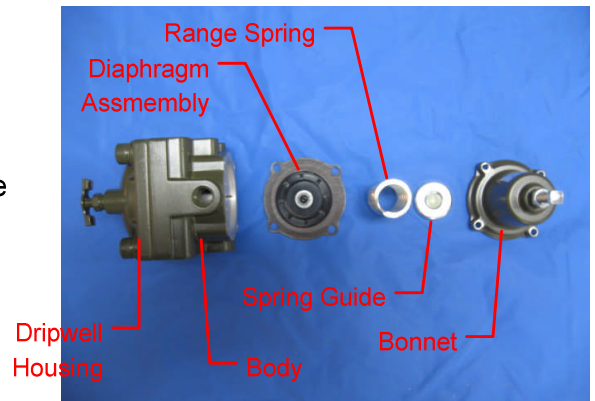

Clean the dripwell housing with fresh water. Lubricate the springs and components with grease.

Reinstall all components and tighten bolts.

